

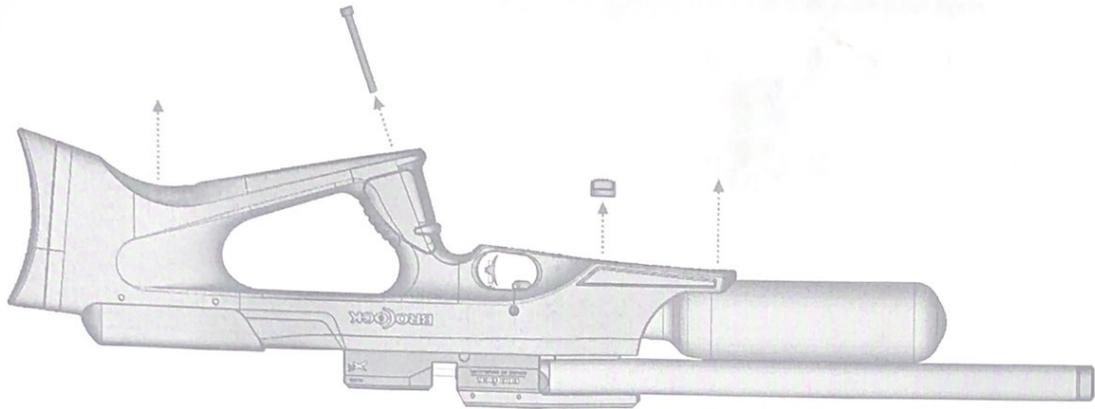


1. remove inlet valve dust cover and stock

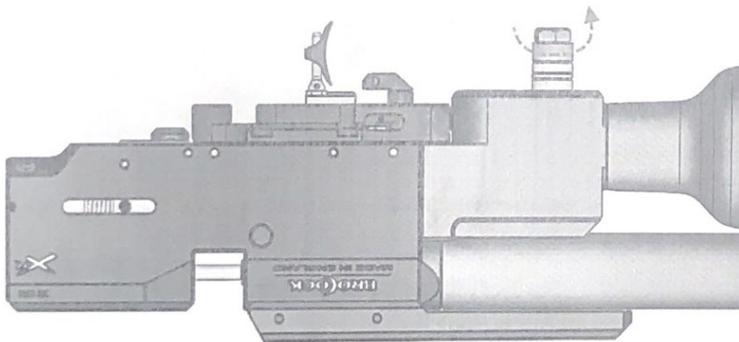


2. using the appropriate tool, unscrew the male connector - inlet valve

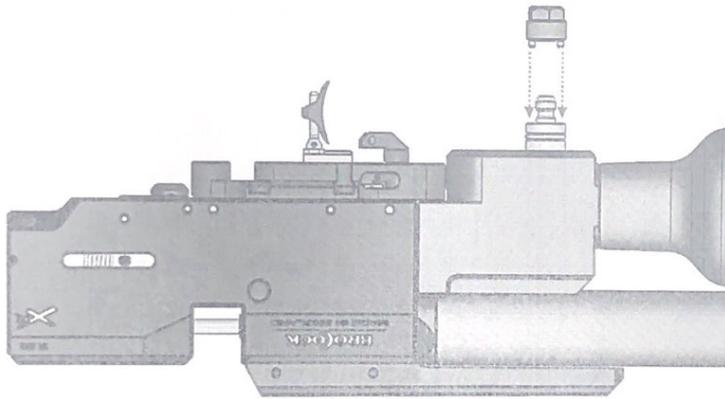


2.1 (BANTAM ONLY)

it is possible that by unscrewing the male connector, the extension will also unscrew together with it, in this case tighten the extension in a vice or with the use of pliers, and unscrew the male connector again

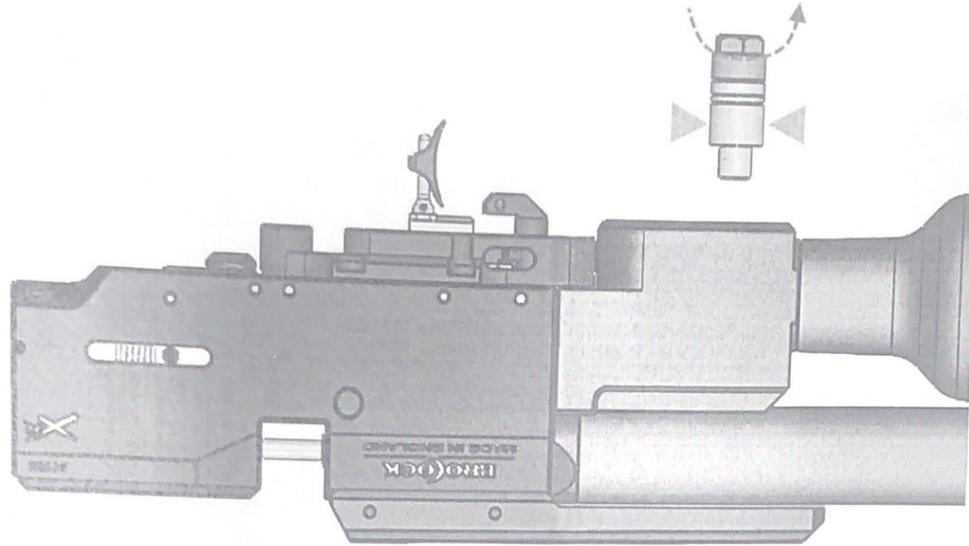


3. replace the old inlet valve with the new one and reassemble by screwing everything together with the appropriate tool (* = bantam only)

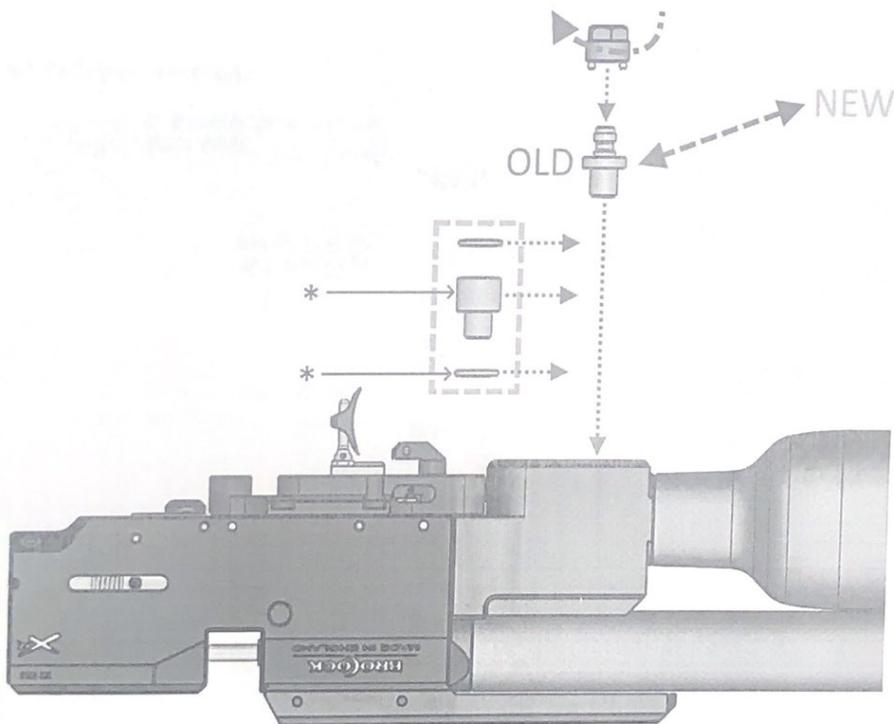

3.1 (COMMANDER ONLY)

insert the spacer supplied with the new inlet valve as shown in the picture below

do not use this spacer in the Bantam

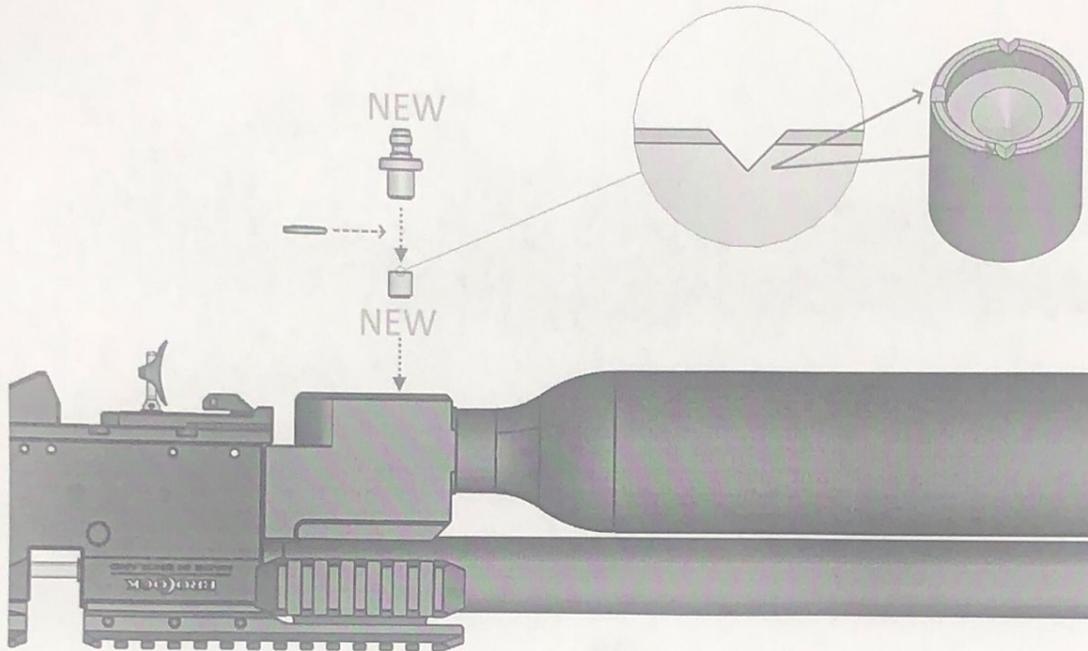

NEW INLET VALVE DETAIL :

o-ring 006 - Ø2.9x1.78 (2012) - urethane
code : D3ORURA06FV

inlet valve pin_MNT
code : D6MNIVPN

inlet valve_male connector v2 BRK
code : BCIVMCV2

sintered filter Ø4x2
code : BCFILT4X2

